
WIRING DIAGRAM

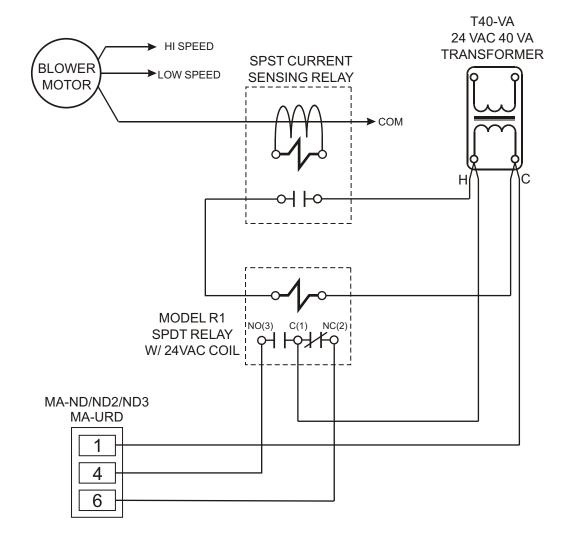

*DAMPER WILL OPEN TO BRING IN FRESH AIR / COMBUSTION AIR WHENEVER BLOWER ENERGIZES

