



WIRING DIAGRAM

To "Y" cooling terminal
inside Furnace/Airhandler

To 24vac Common
inside Furnace/Airhandler

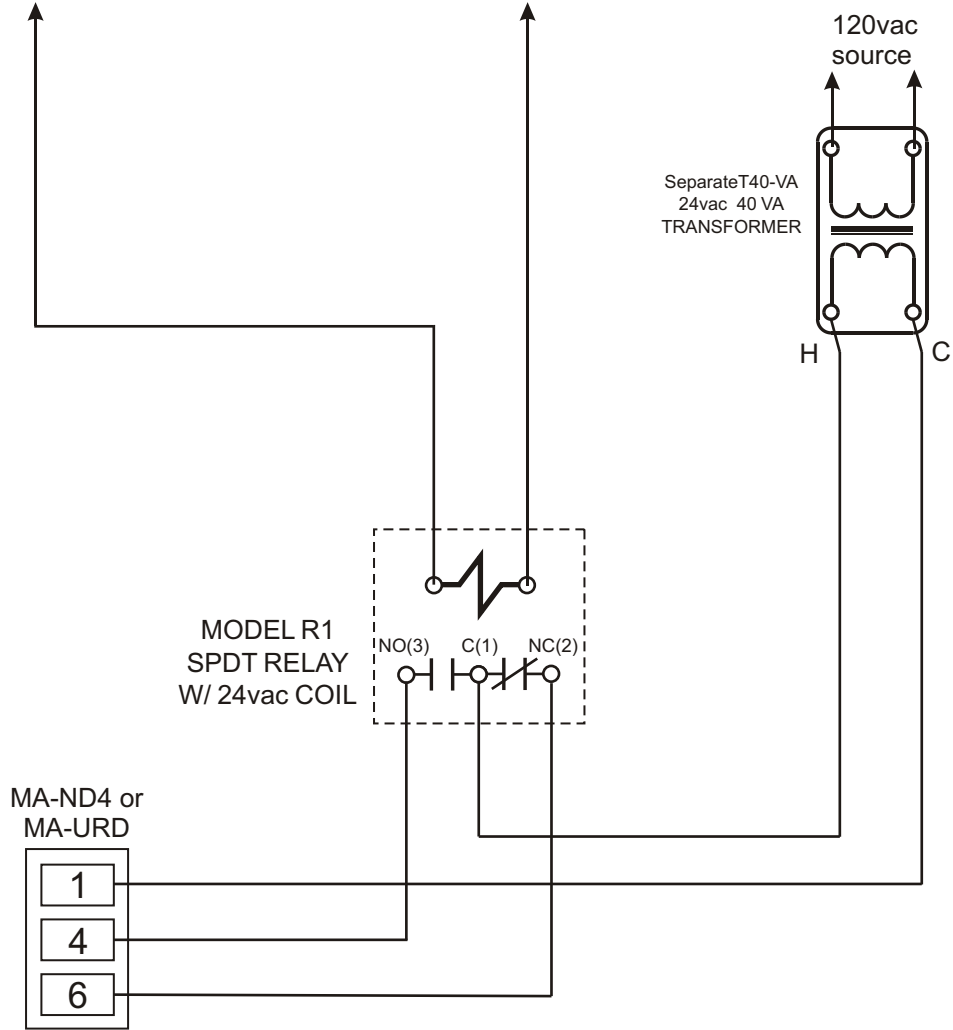

*DAMPER WILL OPEN TO BRING IN FRESH AIR / COMBUSTION AIR WHENEVER BLOWER ENERGIZES

 Englishtown, NJ 07726	DWN ENG: JPB	DWG NAME: MODEL ND/URD DAMPER WIRED to "OPEN" on Cool Operation Only	
	SIZE: A	DATE: 2/06/07	DWG NO: 090512A0059
	SCALE: NOT TO SCALE	COPYRIGHT © EWC CONTROLS INC. ALL RIGHTS RESERVED	REV: A
		SHEET:	1 OF 1