


WIRING DIAGRAM

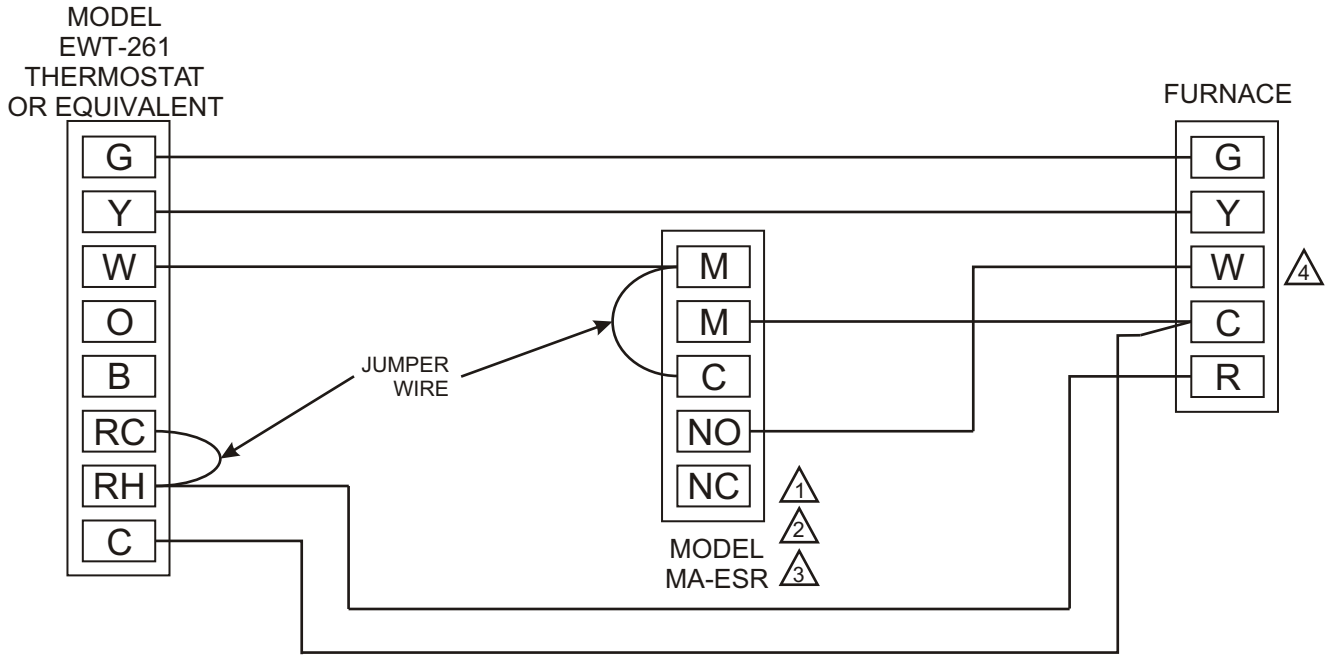

- ① DAMPER IS POWER OPEN / SPRING CLOSE -- MODEL ND-ESR OR URD-ESR
- ② MODEL URD-ESR MUST BE FIELD REVERSED TO POWER OPEN / SPRING CLOSE
- ③ MODEL ND-ESR MUST BE ORDERED POWER OPEN / SPRING CLOSE (IS NOT FIELD REVERSIBLE)
- ④ 'W' (HEAT) WILL ENERGIZE ONCE DAMPER HAS FULLY OPENED

 EWC [®] CONTROLS INC. Englishtown, NJ 07726	DWN ENG:	EDK			DWG NAME:	MODEL MA-ESR-POWER OPEN / SPRING CLOSE COMBUSTION AIR PROVING CIRCUIT		
	SIZE:	A	DATE:	01/27/04	DWG NO:	090512A0061	REV:	B
	SCALE:	NOT TO SCALE	COPYRIGHT © EWC CONTROLS INC. ALL RIGHTS RESERVED			SHEET:	1 OF 1	