
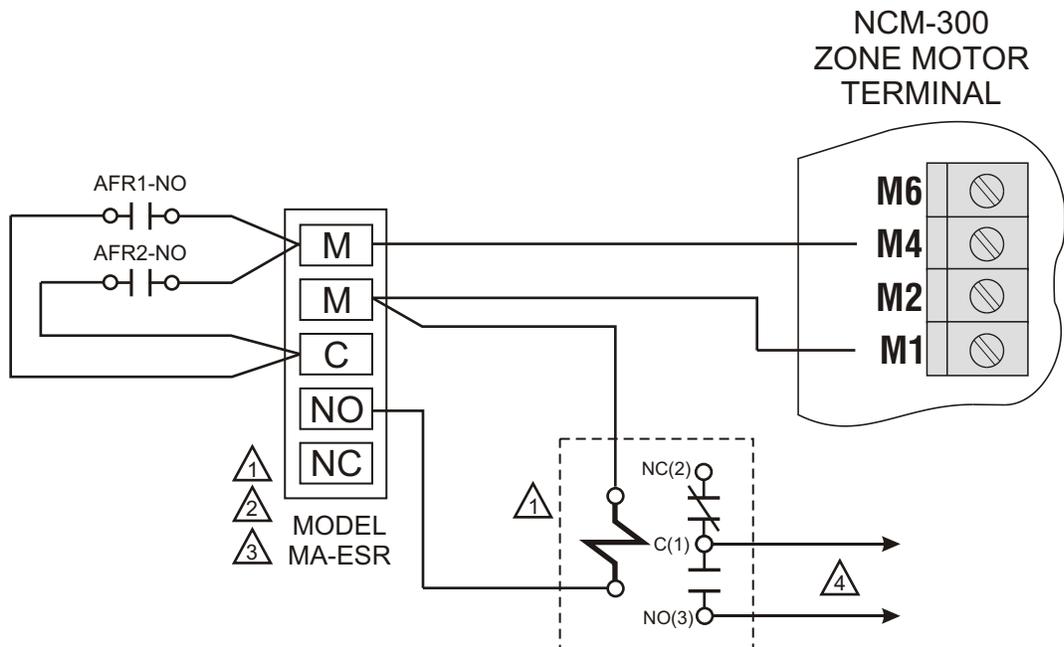


WIRING DIAGRAM

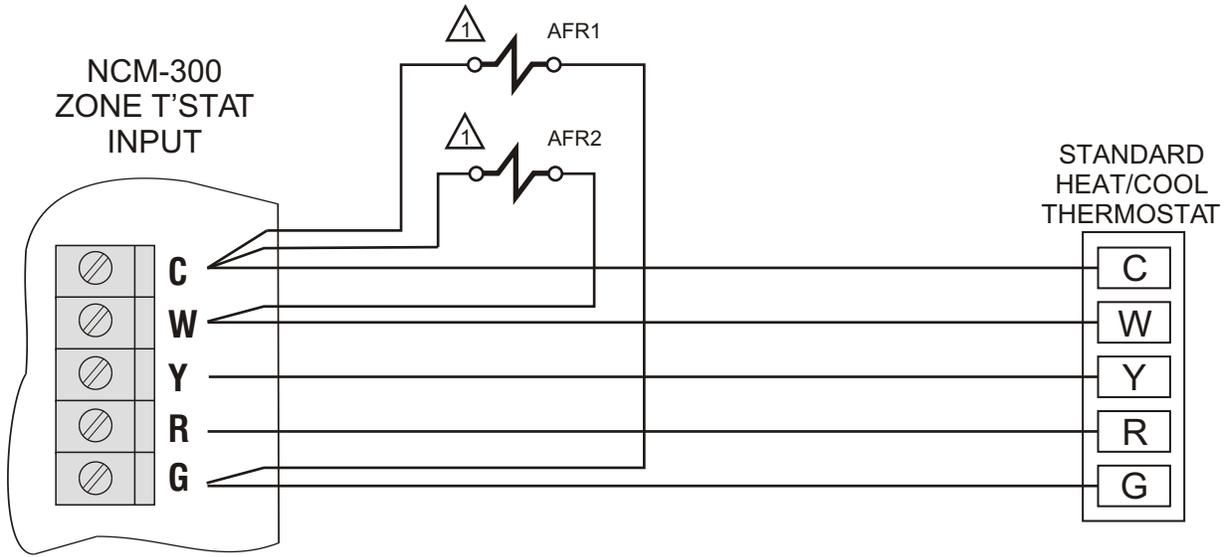

- ① DAMPER IS POWER OPEN / SPRING CLOSE -- MODEL ND-ESR OR URD-ESR
- ② MODEL URD-ESR MUST BE FIELD REVERSED TO POWER OPEN / SPRING CLOSE
- ③ MODEL ND-ESR MUST BE ORDERED POWER OPEN / SPRING CLOSE (IS NOT FIELD REVERSIBLE)
- ④ SWITCHED LEG FOR DUCT BOOSTER. WILL ENERGIZE ONCE DAMPER HAS FULLY OPENED
- ⑤ AFR1/2/3 -- MODEL R1 SPDT RELAY W/ 24VAC COIL

EWC[®]
CONTROLS INC.

Englishtown, NJ 07726

DRAWING BY:
EDK

DWG NAME: MODEL MA-ESR -- POWER OPEN / SPRING CLOSE
USED W/ DUCT BOOSTER ON A ZONE PANEL

DATE:
05/06/04

SIZE:
A

REV:
A

DWG NO:
090512A0068

SHEET: 1 OF 1

COPYRIGHT © EWC CONTROLS INC.
ALL RIGHTS RESERVED

DISCLAIMER: EWC Controls Inc., Cannot be held liable for the use or misuse of this supplied information. It is the responsibility of the user to determine the suitability of the application. Malfunctions, improper operation, and/or subsequent damage to any related equipment or property damage as a result of using this supplied information is the responsibility of the user. EWC Controls Inc., is not responsible for any misapplications including, but not limited to negligence, defect in products(s), system incompatibility, poor workmanship and/or installation.